

MK MACHINING



Aluminum Ultra Low-Profile Scope Level Instructions

To set level:

- 1) Get comfortable behind your rifle, however feels best for you. It is not critical that the rifle is perfectly level, only that it is oriented how you prefer to shoot.**
- 2) Loosen scope rings so you can rotate scope freely, but it does not rotate on its own. For exceptionally low mounted scopes you can remove the scope and install level now.**
- 3) Use a plumb line or level down range to ensure crosshairs are perfectly level, and tighten down rings to recommended torque specs.**
- 4) Install MK Machining level and loosely snug bolt so that the level can be rotated. For nearly all scope mounting setups level can be opened at the hinge to install. If necessary the shoulder bolt can be removed, and pieces separated to install.**
- 5) Ensure that scope level is aligned with plumb line and crosshairs. Tighten bolt to 15 in-lbs.**
- 6) Let us know what you think! We want to hear your inputs on our products.**

Leave a review on our Facebook page, or send us a link to a forum review for 5% off your next order!